4.2.3 Load Type:

Purpose: To select load type

FEAMAC Note: Only LCON is required for FEAMAC, LOP, and LSS are Ignored by FEAMAC.

***LOAD**

LCON=nsel LOP=lop LSS=iopt

%

Where

nsel:

1 = Thermal Load

2 = Mechanical Load

3 = Thermomechanical Load

lop: (for 2-D and 3-D GMC)

1 = axial load in 1-direction 2 = axial load in 2-direction 3 = axial load in 3-direction 4 = shear load 23-direction 5 = shear load 13-direction 6 = shear load 12-direction

99 = generalized loading in potentially all 6 directions

For 2-D GMC:

7 = axial loads in 1 and 2 directions

8 = axial loads in 2 and 3 directions

9 = axial load in 1-direction and shear load in 23-direction

10 = axial load in 2-direction and shear load in 13-direction

For 3-D GMC:

7 = axial loads in 1 and 2 directions

8 = axial loads in 2 and 3 directions

9 = axial loads in 1 and 3 directions

10 = axial load in 1-direction and shear load in 23-direction

11 = axial load in 2-direction and shear load in 13-direction

12 = axial load in 3-direction and shear load in 12-direction

iopt:

1 = Strain control

2 = Stress control

Note: If lop = 99 one must now enter six iopt values, for example: LCON= nsel LOP=lop LSS = iopt1, iopt2, iopt3, iopt4, iopt5, iopt6

Note: see Fig. 6 for the definitions of the directions mentioned above

Note: If using laminate option; lop = 1, 2 or 6 are the only valid selections

Example: General loading option

***LOAD**

LCON=1 LOP=99 LSS=2,1,2,2,2,2 %

▼ Note: This would correspond to specifying mixed stress and strain control, i.e.,:

$$\sigma_{11}, \, \epsilon_{22}, \, \sigma_{33}, \, \tau_{23}, \, \tau_{31}, \, \tau_{12}$$

If however, the loads in the ***MECH** section were set to 0, 0.01, 0,0,0,0 this would correspond to a pure strain control problem in the 22 direction.

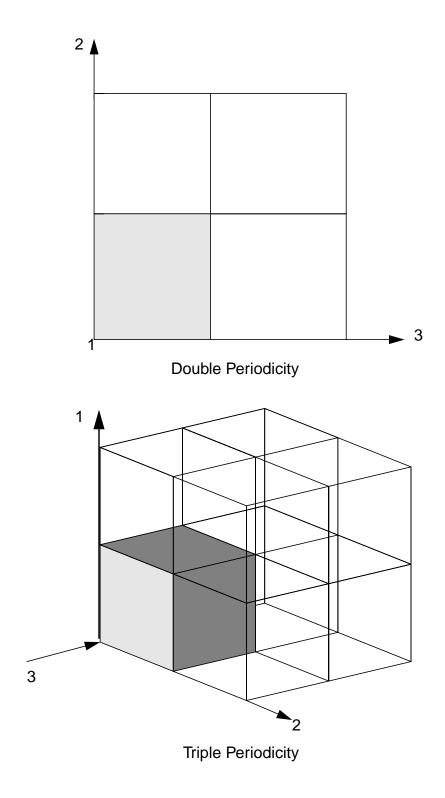


Figure 6: Coordinate Systems

4.2.4 Mechanical Load Control:

Purpose: Select type of load control for mechanical load

- Note: This block is only required if LCON = 2 or 3
- FEAMAC Note: All the data on the MECH card is ignored by FEAMAC

*MECH

NPTW=
$$nptw$$
 TI= $t_1, t_2, ..., t_{nptw}$ LO= $l_1, l_2, ..., l_{nptw}$

%

Where:


nptw: - number of points on load curve $t_1, t_2, ... t_{nptw}$: time values

 $I_1, I_2, ... I_{nptw}$: load curve values

Example:

***MECH**

NPTW=3 TI=0., 1., 2. LO=0., 20., 30. %

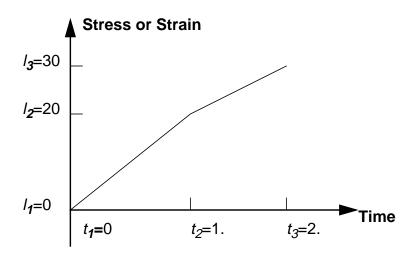

Note: For LOP=7,8,...etc (i.e., two load/displacement components) the following format is required (See Example J for an example):

*MECH

NPTW=2 TI=0., 1.5 LO=0., 0.015 component 1 curve NPTW=2 TI=0., 1.5 LO=0., 0.01 % component 2 curve

For LOP=99, six load/displacement components are required.

4.2.5 Temperature Control:

Purpose: Select control for temperature.

- Note: This block is only required if LCON = 1 or 3
- FEAMAC Note: All the data on the THERM card is ignored by FEAMAC

***THERM**

NPTT=
$$nptt$$
 TI= $t_1, t_2, ..., t_{nptw}$ TE= $te_1, te_2, ..., te_{nptt}$

%

Where:


nptt: - number of points on temperature curve

 t_1 , t_2 , .. t_{nptw} : time values

te₁, te₂, ...te_{nptt}: temperature curve values

Example:

***THERM**

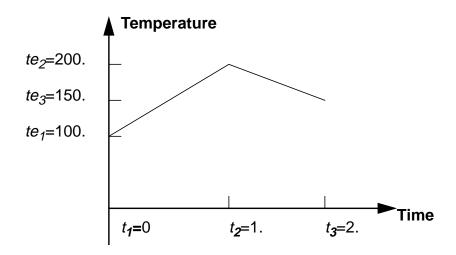

Note: For the thermomechanical load t_{nptw} ≡ t_{nptt} , and both curves must have t_1 ≡ 0. But the number and time value of the data points in-between maybe different, see figure 7.

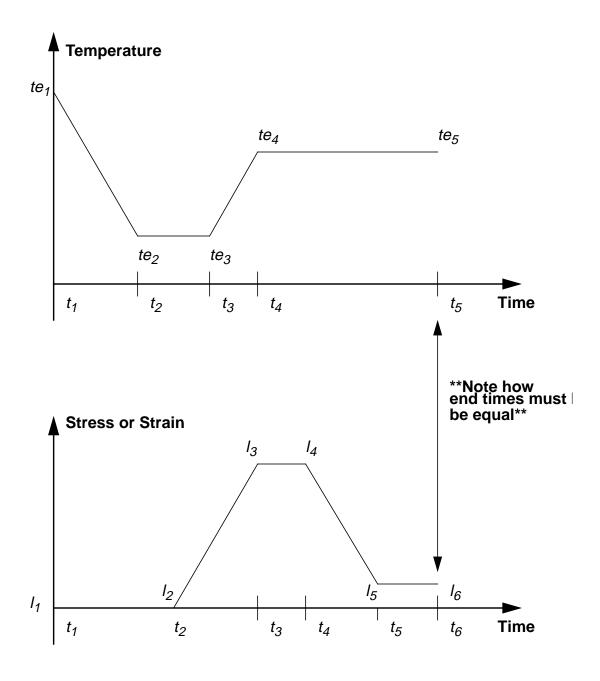


Figure 7: Load History Specification